



CCT SHIPPING FRAMES, LLC  
15774 S. LaGrange Rd., #202  
Orland Park, IL 60462  
Phone: 630.441.7046  
[www.CCTShippingFrames.com](http://www.CCTShippingFrames.com)

## **CHANGING SIZE OF LOADS PIN PLACEMENT INSTRUCTIONS All Versions Except Fold Down**

Please note that this frame is specifically designed to be adjusted with the use of a forklift – not by hand.  
There are 2 pin configurations on each frame.

1. The shorter pin (set pin) cannot be removed when under pressure. This means when the empty top tier is in a set height the set pins are unmovable by design.
- 2.
3. The longer pin (safety pin) is the secondary design meant to insure the lack of movement.

During shipping, the frame is set at the lowest possible height (hole) for ease of shipping. When received, the user should determine how high the top tier needs to be. This decision depends on the size of the load being inserted into the shipping frame.

To change the height, follow these steps:

1. Disengage the safety pins from all 4 corners (the truck version has 2 pins in 2 corners) by rotating and pulling out from the locked position until it clears the leg.
2. The forklift driver should position the fork right below the top tier and lift slightly (just enough to remove the tension from the set pins).
3. The set pins can now be removed.
4. The forklift driver can now raise the top tier to the desired height.
5. Place the set pins in the holes that coincide with the desired height and lower the upper tier into the “V” shaped leg slot.
6. Push in all the safety pins and rotate to lock into place.

***Innovative Shipping Solutions***